


Motion sensor testing



HOW-TO GUIDE

1. Before testing your motion sensors, it is important to know that the wireless motions should be inactive for 3-5 minutes before testing and arming your alarm system.
2. After you motion sensors have been inactive, call the monitoring center and ask the dispatcher to place your system on “test” mode. They will ask for your password and testing timeframe.
3. Arm your alarm system as if you were leaving home by opening and closing the entry door. Wait for the delay time to expire.
4. Walk around your home, passing by your motion sensors to activate alarms on each of them.
5. After activating alarms from all desired motion sensors and hearing the audible alarm/siren, disarm the system as you normally would. You may need to disarm the system twice to reset the alarm. Refer to your owner’s manual if you have questions.
6. Verify the alarm signals were communicated by calling the monitoring center and asking for the account history. When finished, have them remove the system from “test” mode.

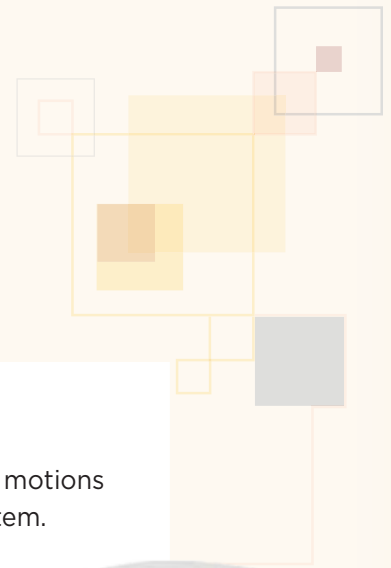